



ADVANCE SERVICE

22.06.2016

DISMANTLING AND REFITTING THE IMPRESS 1/2/2+ AND SUCCESS 2+ CHEST STRAP



Please dismantle the chest strap according to the instructions which follow, and only send in the centre section with the flat tongue parts of the buckles, as shown in the illustrations on the left.

Top: SUCCESS 2+



Bottom: IMPRESS 1/2/2+



General arrangement

The centre section of the chest strap is fastened to the two leg straps, and can easily be removed by unlooping these yourself.

1 / 2



Dismantling Step 1


Slide the neoprene covers down the leg straps until the adjusting buckles are visible.



Dismantling Step 2

Unthread the ends of both leg straps through their adjustment buckles and then out of the ends of the tongues. You can leave the adjustment buckles in position on the leg straps.

Caution: the black plastic part in the leg strap slot can fall out when the webbing is removed. Don't lose this part.

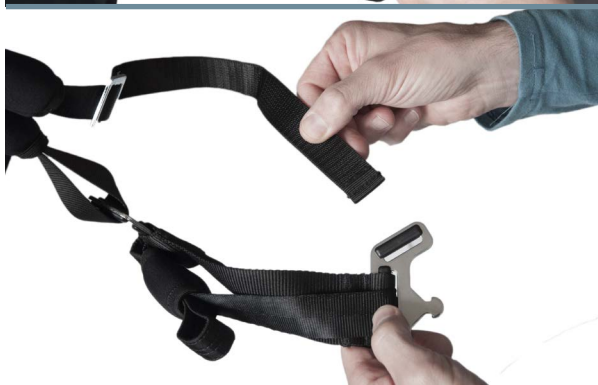

Reassembly Step 1

Put the ends of the leg straps through their slots in the tongues (with the black plastic), then lead them back through their adjustment buckles. Make sure the leg straps are not twisted.



Reassembly Step 2

The white sewing on the leg straps marks the standard setting (where it appears at the fold position at the tongue part of the buckle). The leg strap adjustment buckle should be at least 5 cm from this end of the leg strap. Finally pull the neoprene covers over the adjustment buckles.